LCAL ITEMS LINT		PROJECT: SRMS ASS'Y NOMENCLATURE: DEC PANEL			SYSTEM: D&C SUBSYSTEM ASS'Y P/N: 51140E391 SHEET:	
	MEA EV.	HAME GTY & DRAWING REF. DESIGNATION	FAILURE MODE AND CAUSE	FAILURE EFFECT ON END ITEM	HDWR / FUNC. 1/1 CRITICALITY	RATIONALE FOR ACCEPTANCE SCREENS: N/A
260	•	PROCEED/STOP SWITCH. GTY-1 ME 452-0102- 7105 ED 92020 SHEET 2	MODE: CONSTANT PROCEED OR STOP COMMAND. CAUSE(S): (1) POLE FAILS IN PROCEED OR STOP POSITION. (2) S/C IN PROCEED OR STOP CONTACTS.	CANNO? ENTER AUTO MODE IF NOT IM OME. IF IN AN AUTO MODE: IF FARLED IN PROCEED POSITIOM, SEQUENCE WILL START WITHOUT COMMAND. ARM WILL NOT STOP AT PAUSE POINTS. SEQUENCE WILL CONTINUE EVEN IF STOP SELECTED. IF FAILED IN STOP POSITIOM, AUTO SEQUENCE WILL STOP WITHOUT A COMMAND. CANNOT START AUTO SEQUENCE. FOR CAUSE (2): EXCEPT WHEN STOP CONTACT IS SYC AND PROCEED SELECTED, THE SEQUENCE WILL BEGIN AND IMMEDIATELY STOP. WORST CASE UNEXPECTED MOTION. AUTO SEQ. PROCEEDS WITHOUT COMMAND. UNANUNCIATED. CREW ACTION REQUIRED. REDUNDANT PATHS RENAINING N/A	DESIGN FEATUR TOGGLE SWITCH AND OF A MATU COMMON USE ON THE SWITCHES A SPECIFICATION REQUIREMENTS (ELECTRICAL CON SOLDERABLE TEI WITH A POLYAMI WIRE TO THE SI SPECIFICATION THE WIRING HAR TESTING (FOR I CONTINUITY). MOUNTING OF II MUIT WHICH ENG, WASHER PROVIDI TORQUING, THE ADHESIVE. A SI AGAINST DANAGI ANALYSIS OF II THERE ARE NO I SPECTRUM. THIS OF THE DÂC PAN APPLICATION AN STRESS MARGINS AT THE PART LE DEFINED BY ROO THIS TEST REON DIELECTRIC STY MINUTES PER AN PRESSURE, TOGG REFER TO TABLE ALL UNITS ARE PRE-ACCEPTANCE BESISTANCE.	ES USED ON THE D&C PANEL ARE HERMETICALLY SEALED, RE AND PROVEN DESIGN. THESE SWITCHES ARE IN THE ORBITER VEHICLE. ARE CONTROLLED BY ROCKWELL INTERNATIONAL MC 452-0102 AND HAVE BEEN QUALIFIED TO THE OF THIS SPECIFICATION. RINICITIONS TO THE SWITCH ARE ACHIEVED BY MEANS OF RININALS. ICH TERMINALS UTILIZES MICKEL PLATED CONDUCTORS IN INSULATION. SOLDERING OF THE NICKEL PLATED VISIT HERMINALS IS CONTROLLED BY CAE PROCESS PD 91059. RINESS IS DESIGNED TO BE CAPABLE OF SEPARATE INSULATION RESISTANCE, DIELECTRIC STRENGTH, AND ME SWITCH TO THE D&C PANEL IS BY MEANS OF A 15/32 RGES A THREADED BUSHING ON THE SWITCH. A KEYED WIT IS STAKED TO THE PANEL BY A BLOO OF EPOXY INSULATION RESIRAINT. AFTER INSTALLATION AND NUT IS STAKED TO THE PANEL BY A BLOO OF EPOXY INSULESS STEEL GUARD PROTECTS THE SWITCH LEVER E OR INADVERTENT OPERATION. ME BASIC PAMEL STRUCTURE HAS DEMONSTRATED THAT RESONANCES IN THE RELEVANT VIBRATION FREQUENCY INSULATION ASSEMBLY. MALYSIS HAS CONFIRMED THAT ADEQUATE ELECTRICAL BY ARE ACHIEVED. EVEL, QUALIFICATION/CERTIFICATION MEGS2-0102. JIREMENT INCLUDES: INSULATION RESISTANCE, INSULATION VIBRATION (48 (15), LEAKAGE AT ONE ATMOSPHERE DIFFERENTIAL SIENERGIH, FOR SWITCH OPERATIONAL CYCLES

RMS/D&C - 64

DATE: 24 JUL 91

CIL REV: 1

SUPERCEDING DATE: 11 SEP 86

, 1

PREPARED BY:

MFMG

CRITICAL ITEMS LIST

RITICAL ITE	MS LIST		ROJECT: SANS SS'Y NOMENCLATURE: D	EC PANEL	SYSTEM: DAC SUBSYSTEM ASS'Y P/N: 51140E391 SHEET:
FREA FREA REF. REV.	NAME, QTY, & DRAWING REF. DESIGNATION	FAILURE MODE AND CAUSE	FAILURE EFFECT ON END ITEM	HDWR / FUNC. 1/1 Criticality	RATIONALE FOR ACCEPTANCE SCREENS: N/A
260	PROCEED/STOP SWITCH. QTY-1 HE 452-0102- 7105 ED 92020 SHEET 2	HODE: CONSTANT PROCEED OR STOP COMMAND.: CAUSE(S): (1) POLE FALLS IN PROCEED OR STOP POSITION. (2) S/C IN PROCEED OR STOP CONTACTS.	CANHOT ENTER AUTO MODE 1F HOT 1N ONE. IF IN AN AUTO MODE: IF FAILED IN PROCEED POSITION, SEQUENCE WILL START WITHOUT CONNAND. ARM WILL NOT STOP AT PAUSE POINTS. SEQUENCE WILL CONTINUE EVEN IF STOP SELECTED. IF FAILED IN STOP POSITION, AUTO SEQUENCE WILL STOP WITHOUT AUTO SEQUENCE WILL STOP WITHOUT A COMMAND. CANNOT START AUTO SEQUENCE. FOR CAUSE (2): EXCEPT WHEN STOP CONTACT IS S/C AND PROCEED SELECTED, THE SEQUENCE WILL GEGIN AND IMMEDIATELY STOP. MORST CASE UNEXPECTED MOTION. AUTO SEQ. PROCEEDS WITHOUT CHANNUNCIATED. CREW ACTION REQUIRED. REDUNDANT PATHS REMAINING	O VIBRATION: O THERMAL: THE D&C PANEL SYSTEM TESTS TEST) WHICH VI QUALIFICATION THE SWITCH IT! PANEL ASSEMBL! QUALIFICATION: O VIBRATION: O THERMAL: O HEMIDITY: O EMC: FLIGHT CHECKOR	STS ITEM IS SUBJECTED TO THE FOLLOWING ACCEPTANCE TESTS AS PART OF THE DEC PANEL ASSEMBLY. LEVEL AND DURATION - REFERENCE TABLE † +110 DEGREES F TO PLUS 10 DEGREES F (2 CYCLES - 9.5 HRS/CYCLE.) ASSEMBLY IS FURTHER TESTED AS PART OF THE RNS (IP518 RNS STRONGBACK TEST AND IP552 FLAT FLOOR ERIFIES THE ABSENCE OF THE FAILURE MODE. TESTS EM HAS BEEN QUALIFIED FOR ORBITER USE. THE D&C Y HAS BEEN SUBJECTED TO THE FOLLOWING TEST ENVIRONMENTS. LEVEL AND DURATION - REFERENCE TABLE 1 20G/11 MS - 3 AXES (6 DIRECTIONS) 130 DEGREES F TO -23 DEGREES F (12 HRS PER CYCLE) (6 CYCLES) 95X (120 DEGREES F TO 82 DEGREES F CYCLE IN 16 HRS) 10 CYCLES TOTAL. MIL-STD-461 AS MODIFIED BY SL-E-0002 (TEST CEO1, CEO2, CEO3, CSO6, REO2 (B/M), RSO2, RSO3, RSO4)
EPARED BY: MF	·WG	SUPERCEDING DATE	:: 11 SEP 86 /	APPROVED BY:	DATE: 24 JUL 91 CIL REV:

	DESIGNATION	AND CAUSE	THD ETEM	1/1 CPILICALITY SCREENS: N/A
260 1	PROCEED/STOP SWITCH. GTY-1 ME 452-0102- 7105 ED 92020 SHEET 2	MODE: CONSTANT PROCEED OR STOP COMMAND. CAUSE(\$): (1) POLE FAILS IN PROCEED OR STOP POSITION. (2) S/C IM PROCEED OR STOP CONTACTS.	LAMNUT ENTER AUTO MODE: IF FAILED IN PROCEED POSITIOM, SEQUENCE WILL START WITHOUT COMMAND. ARM WILL NOT STOP AT PAUSE POINTS. SEQUENCE WILL CONTINUE EVEN IF STOP SELECTED. IF FAILED IN STOP POSITION, AUTO SEQUENCE WILL STOP WITHOUT A COMMAND. CANNOT START AUTO SEQUENCE WILL STOP WITHOUT A COMMAND. CANNOT START AUTO SEQUENCE WILL STOP WITHOUT A COMMAND. CANNOT START AUTO SEQUENCE WILL STOP WITHOUT A COMMAND. CANNOT STOP. WORST CASE UNEXPECTED MOTION. AUTO SEQ. PROCEEDS WITHOUT COMMAND. UNANHUNCEATED. CREW ACTION REDUNDANT PATHS REMUNDANT PATHS	GA/INSPECTIONS HERNETICALLY SEALED TOGGLE SWITCHES ARE PROCURED TO ROCKWELL SPECIFICATION NC452-0102. ROCKWELL PART NO. MC452-0102

PREPARED BY:

MFWG

SYSTEM: DEC SUBSYSTEM ASS'Y P/N: 51140E391 PROJECT: SRMS
ASS'Y NOMENCLATURE: DEC PANEL CRITICAL ITEMS LIST SHEET: __4 FAILURE EFFECT HOWR / FUNC. RATIONALE FOR ACCEPTANCE NAME, QTY, & DRAWING REF. FAILURE MODE FMEA FHEA AND ON 1/1 REV. REF. SCREENS: N/A END ITEM CRITICALITY CAUSE DESIGNATION CANNOT ENTER **FAILURE HISTORY** 260 1 PROCEED/STOP HODE: AUTO MODE IF SWETCH. CONSTANT . PROCEED OR NOT IN ONE. IF IN AN AUTO Q1Y-1 THERE HAVE BEEN NO FAILURES ASSOCIATED WITH THIS FAILURE ME 452-0102-7105 STOP MODE ON THE SRMS PROGRAM. COMMAND. ED 92020 IF FAILED IN SHEET 2 CAUSE(5): PROCEED POSTTION. (1) POLE SEQUENCE WILL START WITHOUT FAILS IN PROCEED OR COMMAND. ARM STOP POSITION. WILL NOT STOP AT PAUSE POINTS. (2) S/C IN SEQUENCE WILL PROCEED OR CONTINUE EVEN STOP CONTACTS. SELECTED. IF FAILED IN STOP POSITION, AUTO SEQUENCE WILL STOP WITHOUT A COMMAND. CANNOT START AUTO SEQUENCE. FOR CAUSE (2): EXCEPT WHEN STOP CONTACT IS S/C AND PROCEED SELECTED, THE SEQUENCE WILL DEGIN AND IMMEDIATELY STOP. WORST CASE UNEXPECTED HOTION. AUTO SEQ. PROCEEDS WITHOUT COMMAND. UNANNUNCIATED. CREW ACTION REQUIRED. REDUNDANT PATHS REMAINING H/A

APPROVED BY:

SUPERCEDING DATE: 11 SEP 86

CIL REV: 1

DATE: 24 JUL 91

CRITICAL ITEMS LIBT

			 	S'Y HIMENCLATURE: DE		ASS'Y P/N: 51140E391 SILL1:
	FMF . REV.	OTY, B VING REF. ISIGNATION	FATLURE MOOF AND CAUSE	I FAILURE EFFECE ON END ETEM	HDWR / FUNC. 1/1 CRITICALITY	RATIONALE FOR ACCEPTANCE SCREENS: N/A
260	1	PROCEED/STOP SWITCH. 0TY-1 HE 452-0102- 7105 ED 92020 SHEET 2	HODE: CONSTANT PRICEED OR STUP COMMAND. CAUSE(S): (1) POLE FAILS IN PROCEED OR STOP POSITION. (2) S/C IM PROCEED OR STOP CONTACTS.	CANNOT ENTER AUTO MODE IF NOT IN ONE. IF IN AN AUTO MODE: IF FAILED IN PROCEED POSITION, SEQUENCE WILL START WITHOUT COMMAND. ARM WILL NOT STOP AT PAUSE POINTS. SEQUENCE WILL CONTINUE EVEN IF STOP SELECTED. IF FAILED IN STOP POSITION, AUTO SCOUENCE WILL STOP WITHOUT A COMMAND. CANNOT START AUTO SEQUENCE. FOR CAUSE (2): ENCEPT WHEN STOP DONTACT IS SYC AND PROCEED SELECTED, THE SEQUENCE WILL BEGIN AND INNEDIATELY STOP. WARST CASE UNEXPECTED MOTION. AUTO SEQ. PROCEEDS WITHOUT COMMAND. UNANUNCIATED. CREW ACTION REQUIRED. REDUNDANT PATHS REMAINING	OPERATIONAL EF IF FAILURE OCC MODE. IF FAIL THE PROCEED/SI WILL STILL FOLE ENDPOINT IS RE CREW ACTION APPLY BRAKES I ARM. CREW TRAINING APPLY BRAKES I THE ARM DOESN* HISSION CONSTR ONLY ENTER AUT CREW SHOULD HO WHAT TRAJECTOR OBSTACLES IN T RESPOND PROPER CMRSD OFFLINE EXERCISE D&C P VERIFY BITS IN OMRSD ONLINE I MONE OMRSD ONLINE I	CURS PRIOR TO ENTERING AUTO MODE, CANNOT ENTER URE OCCURS AFTER ENTERING AUTO MODE IOP SWITCH WILL NOT STOP THE ARM. THE SEQUENCE LOW ITS PREPROGRAMMED PATH UNTIL THE DESIRED ACHEO. INSTEAD OF THE PROCEED/STOP SWITCH TO STOP THE IMMEDIATELY AFTER IT RESPOND PROPERLY TO COMMANDS. IAINT O MODE IMMEDIATELY PRIOR TO SELECTING PROCEED. IT ENTER ANY AUTO MODE UNLESS THEY KNOW EXACTLY IT WILL TAKE AND ENSURE THAT THERE ARE NO INE PATH OF THE SEQUENCE. IF ARM DOES NOT ILLY TO COMMANDS, APPLY BRAKES. PANEL PROCEED/STOP SWITCH INCIU/D&C PANEL DATA BUS INSTALLATION PANEL STOP/PROCEED SWITCH